

series100



[www.ergomotion.us](http://www.ergomotion.us)

1.888.550.ERGO



series100  
OWNER'S MANUAL

- A. **2 INCH LEGS**
- B. **7 INCH LEGS**
- C. **3 INCH EXTENDERS**
- D. **9 INCH CASTERS**
- E. **HEADBOARD BRACKET**

# ACCESSORIES



## WEIGHT

The recommended weight restrictions for the Ergomotion Adjustable Base are as follows and include the weight of the mattress which will reduce this weight limit by 50 to 100 lbs depending on the mattress size: Twin 400 lbs, Split Beds 400 lbs per side, Full 450 lbs and Queen 500 lbs. The bed will support the recommended weight limits if distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. Consumers should not enter or exit the bed with any portion in the raised position. Do not sit on the head or foot sections while in the raised position. Exceeding the recommended weight restrictions could damage your bed base and void your warranty.

## ACOUSTICS

The massage function will emit a noticeable tone during operation. As the massage intensity level is increased, the tone will intensify. The volume of this tone is directly related to the location environment. For example, When demonstrated in a show room, the surrounding environmental noise will cover some of the massage noise. However, when installed in a home setting with wooden floors, carpeted or not, the massage volume will be more noticeable.

In normal base operation, the wheels which allow the bed to maintain its distance from the wall will make contact with the steel platform supports of the base creating a contact noise. When entering, exiting or shifting weight on the base, this contact noise may be audible as the wheels make contact. This is normal.

SERIAL NUMBER



Open Box. Locate the 4 Language Installation Instructions.

Lean bed against wall in the open box. The head of the bed facing down.



Locate the box containing the legs. Screw the legs in position by hand. Tighten firmly. If the legs are not desired, skip this step.

*For optional leg sizes, refer to page 13.*



Connect transformer to control box.



### Power Cords

Make sure the power cords are inserted properly. They may have loosened in transport.

The Emergency battery pack should only be connected and used in case of power failure or other emergencies. Please use alkaline batteries only.



### Back Up Batteries

Install back-up batteries into the provided battery pack. Store the pack in a convenient location for emergency use. Batteries are not to be used for normal operation of the bed.

Use: For emergency use only, in case of power outage.

Type: (4) Alkaline 9 Volt only.

Do not mix brand name batteries

Connect battery pack into transformer box, if the bed is in the upright position.


Press the "flat" button for the lower bed only function.

Batteries are not to be used for normal operation of the bed.

*Remove the pack after emergency is over, as the system will continue to draw power out of the batteries, even if not in use.*




If forming a king or queen bed from (2) bases, (2) plastic straps are provided (one per bed). To install, lean the two beds against the wall, head side down, install the straps as shown, before lowering the two beds simultaneously.

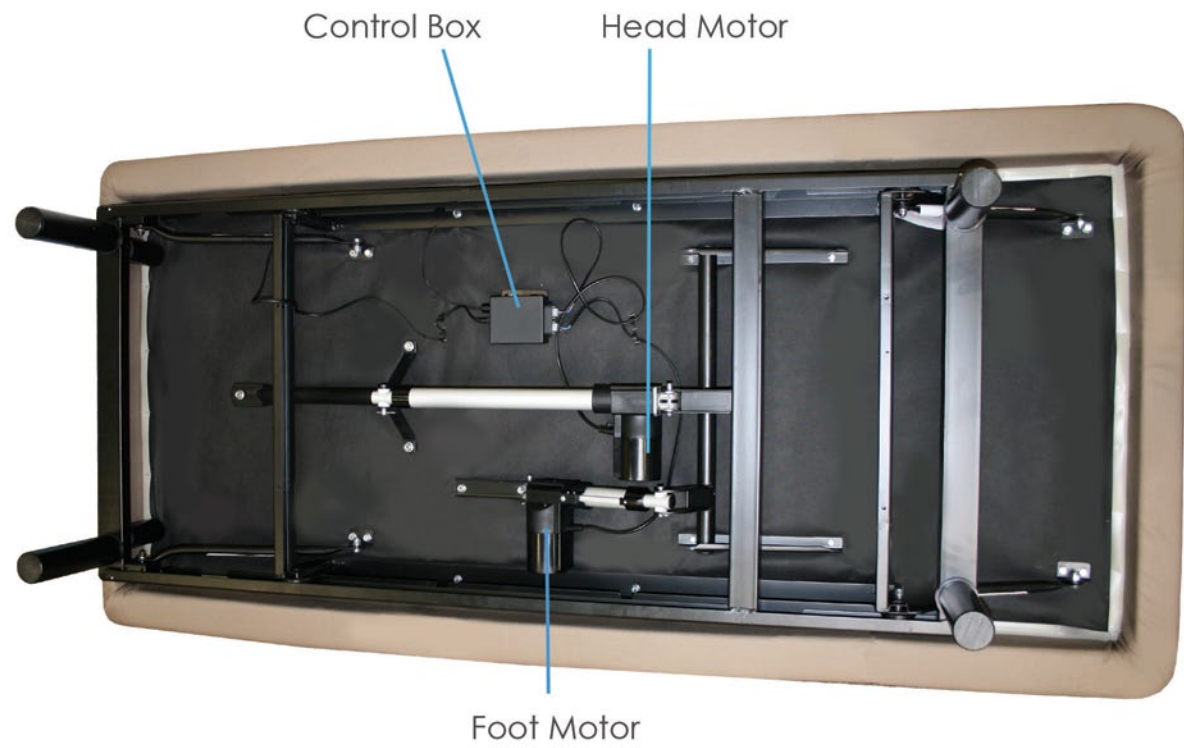

### Motor Removal

Disconnect wire cord. Remove pins (2)

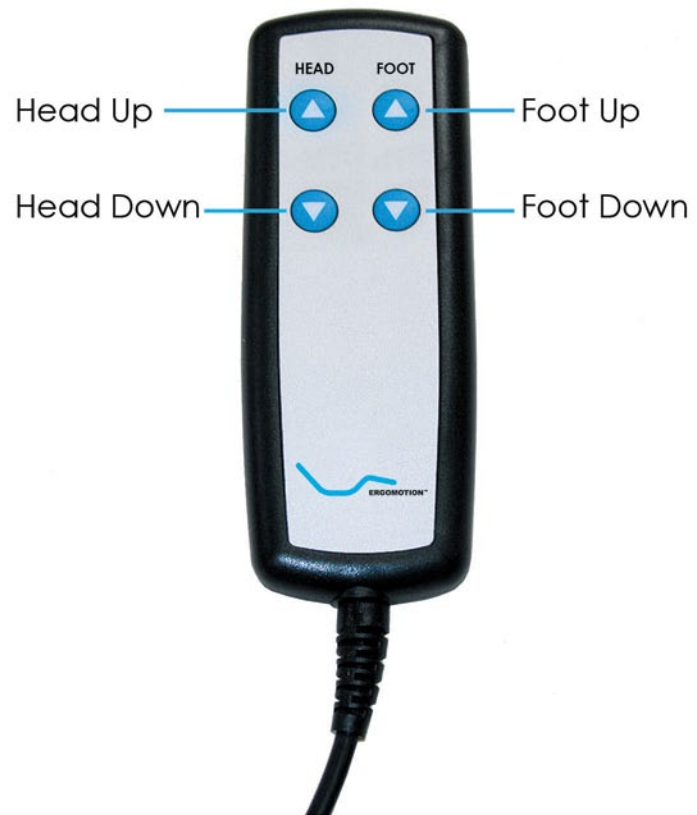

Do not put any body parts in areas of the metal frame that may cause injury